


Quick Disconnects

To assemble the breathing hose quick disconnects for your Classic KISS, first ensure that you have the following pieces:

- A. 4 Hose Stubs and Locking Rings
- B. 2 DSV Adapters
- C. 2 Hose Attachment Towers

The above parts may be shipped with 2 of the hose stubs and locking rings attached to the hose attachments. If they are, push down on the hose stubs and turn to the left to remove. The action is similar to opening a child proof medicine bottle. Also, using the same action separate the other 2 hose stubs from the DSV adapters.

You will also need the 4 sets of rings & hose clamps, DSV, scrubber head and the breathing hoses.

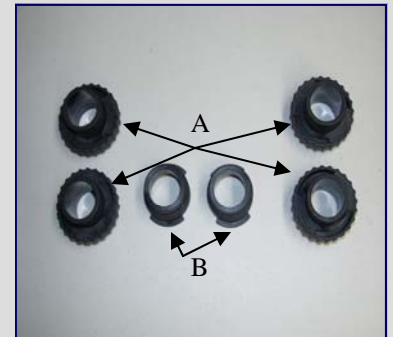

To install the towers on your scrubber head, you will need a cup of boiling water, silicone grease and silicone sealant. First, put the tower, screw end down into the cup of boiled water and let it sit for approximately 30 seconds. While the tower is soaking, apply a light amount of silicone grease to the threaded area on the scrubber head. When the bottom of the tower is hot, working quickly, apply a bead of silicone sealant about 1/3 of the way around the inner lip of the tower, on the threaded area. Use your finger to distribute the sealant all the way around the lip.

Screw the tower into the scrubber head immediately, while the plastic is still hot and soft. Ensure that the tower is screwed in straight. It will be a very tight fit. Once installed, consider the towers to be permanently attached.

Apply silicone sealant to this area.



To attach the DSV adapters, remove the monofilament from the DSV and take off the hose sleeves. Once removed, replace them with the DSV adapters and replace the monofilament to secure.



Lastly, the hose stubs and locking rings need to be attached to the breathing hoses. Place a hose ring and small hose clamp over the end of the breathing hose and push the hose into position. Place the hose ring and hose clamp over the hose and hose stub, and secure. Repeat with the remaining 3 hose stubs.



Finally to attach the breathing hoses to the DSV, push the hose stubs onto the DSV adapters, push down and turn right.

Repeat to attach the other hose ends to the hose attachments.

***SERVICE: THE O-RINGS ON THE HOSE STUBS AND THE CORRESPONDING SURFACES ON THE DSV ADAPTERS AND HOSE ATTACHMENTS SHOULD BE LUBRICATED ON A REGULAR BASIS.**